



End view of pipe/fabric connection. Cut an X in the fabric slightly larger than pipe, pull the fabric around the pipe to create the "boot" and then secure with a hose-clamp.

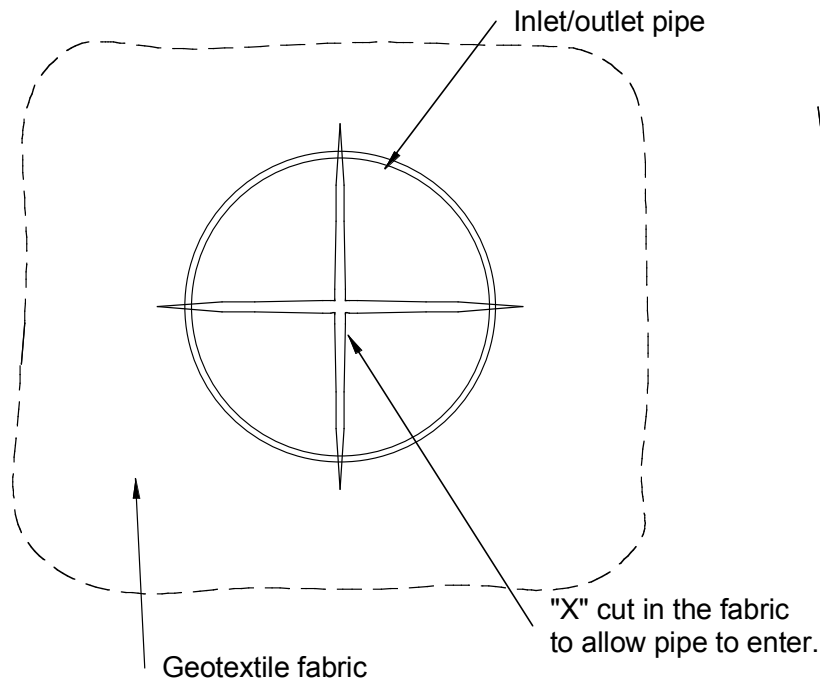

End View

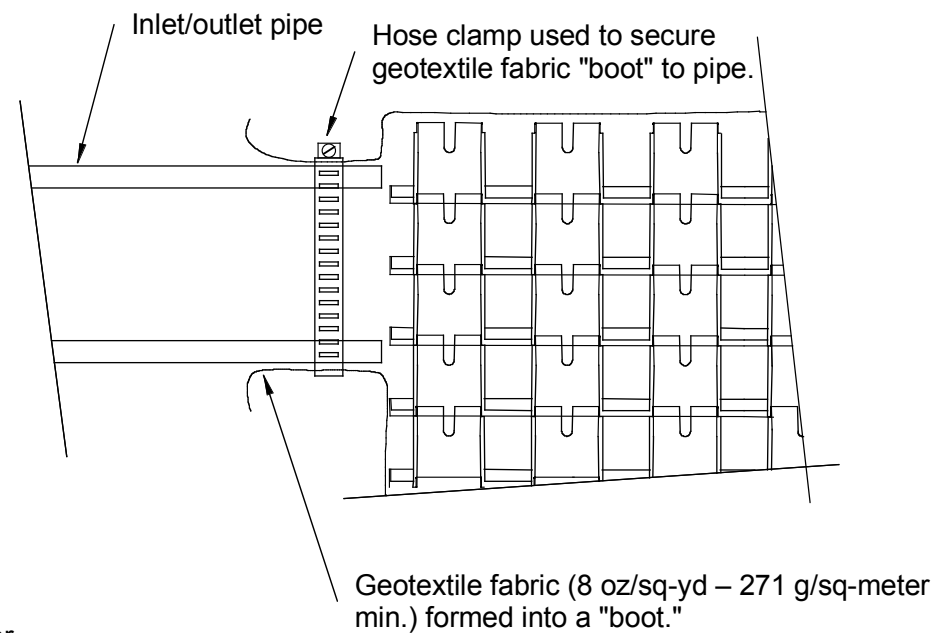

Side View

Rainstore3 Inlets/Outlets With Fabric

Connecting pipe to the Rainstore3 structure

NOT TO SCALE



RS3inletoutlet.dwg

1600 Jackson St., Suite 310
 Golden, Colorado 80401
 800-233-1510 FAX 800-233-1522
 www.invisiblestructures.com 08/04